
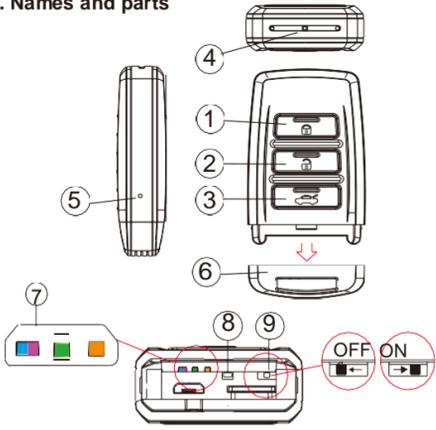
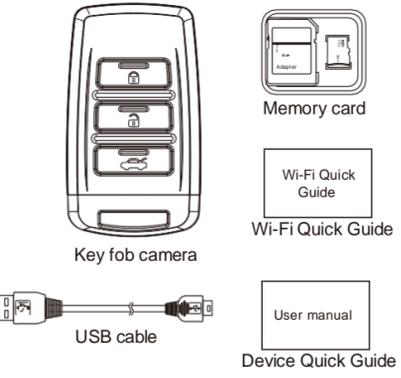
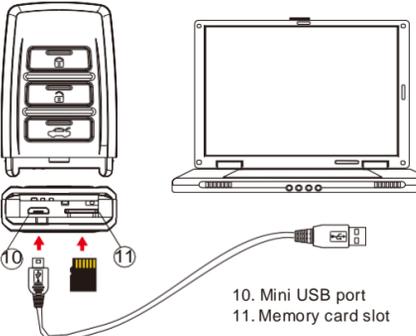


<h3>1. Names and parts</h3>  <ol style="list-style-type: none"> 1. Power on / Record button 2. Power off button 3. Wifi on / off button 4. 5MP Camera 5. Default key 6. Rearcover 7. LED indicators 8. Reset key 9. Vibration Switch <p> <ul style="list-style-type: none"> • Blue - power on • Purple - recording on • Green - charging • Orange - Wi-Fi </p> <p style="text-align: center;">1</p>	<h3>2. Package Content</h3>  <p>Key fob camera</p> <p>Memory card</p> <p>Wi-Fi Quick Guide</p> <p>USB cable</p> <p>User manual</p> <p>Device Quick Guide</p> <h3>3. Vibration Alert</h3> <p>Power on / off - 1 long vibration Rec on - 1 long vibration Wi-Fi on - 1 long vibration Wi-Fi off - 2 short vibrations Turn on Wi-Fi while recording - 2 long vibrations Turn off Wi-Fi while recording - 2 short and 1 long vibration</p> <p style="text-align: center;">2</p>	<h3>4. Charge the battery & Insert memory card</h3>  <p>10. Mini USB port 11. Memory card slot</p> <p>Remove the rear cover of the device, plug the micro USB end of cable into (10) and plug the other end into the computer or other USB power source. After charging is complete, insert the memory card into (11). Then the device will be ready for further operations.</p> <ul style="list-style-type: none"> • Solid green LED ■ - the device is charging. • Green LED goes off - the device is full charged. <p>Note: Device can't be powered on, if no memory card is inserted into the device.</p> <p style="text-align: center;">3</p>
--	---	--

<h3>5. Format memory card</h3> <ol style="list-style-type: none"> 1. With gold contact facing up, insert the memory card into (11). 2. Press (1) to power on the device. 3. Hold (2) first, press (3) for two seconds, wait until you see the purple blinking LED, then release both. <ul style="list-style-type: none"> • Solid blue LED ■ - the device is powered on. • Purple LED blinks for five times ■ - the memory card is being formatted. • All lights go off with one vibration - the formatting is completed. <p>⚠ Note: To make sure the memory card can be read by the computer, please format the memory card before using it for the first time. Also, please note that formatting on computer is highly not recommended, for it might result in the failure of formatting.</p> <h3>6. Date and time setting (for Windows system)</h3> <ol style="list-style-type: none"> 1. From the desktop right-click to open Notepad, create a text file named settime.txt 2. On the first line of the file, enter date and time information as year.month.day hours.minutes.seconds. For example, suppose the time is October 16, 2015 15:00. Then, please enter 2015.10.16 15:00:00 Note: There should be a space left between day and hours, and the time format should be the 24-hour format. 3. Save the file to the root directory of the memory card. 4. Insert the memory card into the slot, and power on the device. The date and time setting is now completed. Note: When the date and time setting is completed. The settime.txt file will not be visible when you connect the device to the computer again. <p style="text-align: center;">4</p>	<h3>7. Operation</h3> <p>7-1 Power on: Press (1) once.</p> <p>7-2 Recording: With device powered on, press (1) again to start or stop recording.</p> <p>7-3 Vibration: Switch (3) to the left to turn off, or right to turn on.</p> <p>7-4 Wi-Fi: With device powered on, press (3) to turn on/off Wi-Fi.</p> <p>7-5 Power off: With no ongoing recording, press (2).</p> <p>7-6 Reset: When the device functions abnormally, press (8).</p> <p>7-7 Restore default Wi-Fi password and SSID: Long press (5) for 4 seconds, and release.</p> <p>7-8 Restore all default settings: Press (5) for 10 seconds, and release.</p> <ul style="list-style-type: none"> • Solid blue LED ■ - power on • Solid purple LED ■ - recording on • Blinking orange LED ■ - device is searching for Wi-fi connection. • Solid orange LED ■ - device is successfully connected to Wi-fi. <p style="text-align: center;">5</p>	<h3>8. Download videos and photos from DVR</h3> <p>Knowing that all video files are stored in the memory card, you have two ways to download the files.</p> <ol style="list-style-type: none"> 1. Use a memory card reader to transfer data from the card to the computer. 2. Or, connect the device to the computer with memory card inserted. Turn on the device and it will work as a flash drive. <h3>9. Rename the device Wi-Fi SSID</h3> <p>To change the default SSID name, right-click on Windows desktop. Create a Notepad *.txt (text) file and name it as setSSID.txt. Enter your new SSID name on the first line of the file, save it to the root directory of memory card, and insert the card back to the device. Lastly, power on the device. Note: SSID name must be started with PV and followed by 6 ~ 14 characters of numbers or alphabets (e.g. PV123abc).</p> <h3>10. Others</h3> <ol style="list-style-type: none"> 1. Device will automatically shut down after 3 minutes of no operation. 2. With no memory card inserted, the device can work as a web camera when it's connect to computer by USB cable. <p style="text-align: center;">6</p>
---	---	--

1080p Key Fob Wi-Fi DVR

User Manual

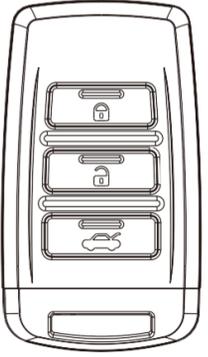

innovation never stops

V1.